

Cloud for TEOS

For organizations that don't have or want on-site hardware and infrastructure, we can offer a very flexible TEOS solution as it is existing on premise today but in the Cloud run by Amazon Web Services.





No on-site Server

Organisations won't have to worry about outgrowing on-site storage.



Easy setup and access

Using a simple internet network and synchronizing your devices with TEOS using a simple passcode and a TEOS Cloud Control app.



On-premise & CLOUD

Get the best of TEOS Solution you maybe already know on-premise in the CLOUD. Keep all the flexibility for the administration of your Buildings



Secure & robust

Amazon Web Services and new TEOS Architecture offer robust security and best service performance.



Choose your installation type

Device Control

Apps installations & Updates

Issue report

Badge printer (for reception)

User rights management

Users access simultaneous accesses

Content rights management

Schedule management

Workplace solutions (room booking, etc.)

Signage

Analytics & Site management

Data Export

Active Directory & SSO

Building Management

Maximum Advanced Licenses (TEM-ALXX)

Mirroring (using TEOS Connect)



S M B C L O U D

Yes

Yes

Yes

No

Yes

Yes

Limited

Yes

Yes

Basic signage mode

No

No

No

Yes (LoRaWAN only)

30

Yes



ENTERPRISE CLOUD

Yes

Yes

Yes

No

Yes

Yes

Selectable (depending if basic or advanced signage mode is used)

Yes

Yes

Selectable (Basic or advanced)

Yes

Yes

Yes

Yes (LoRaWAN only)

No limit

Yes



ENTERPRISE ON-PREMISE

Yes

Yes

Yes

Yes

Yes

Yes (depending on server specifications)

Selectable (depending if basic or advanced signage mode is used)

Yes

Yes

Selectable (Basic or advanced)

Yes

Yes

Yes

Yes (KNX, DALI, LoRaWAN)

No limit (depend on server specifications)

Yes



TEOS Corporate CLOUD access and tests

2x CLOUD platforms are accessible today for demonstration and tests. You can also find all TEOS information under https://bit.ly/sonypsetech














Connect you device to the Cloud for TEOS (1/3)

Please find below the different steps to connect your devices to TEOS

- 1. Make sure your TEOS Cloud app is installed in your device
- 2. Connect to your CLOUD platform for example http://demo.teoscloud.com, users are added with email address and password is Demo@2021! Please contact us if you don't have access.

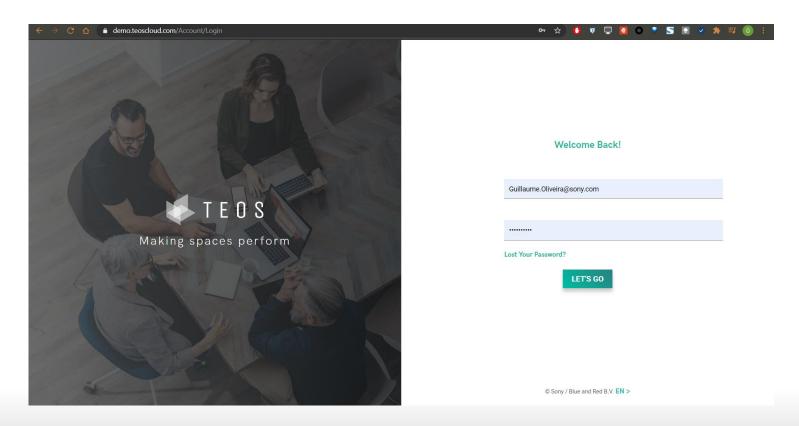





Connect you device to the Cloud for TEOS (2/3)

Please find below the different steps to connect your devices to TEOS

3. Go to Administration > AV Devices

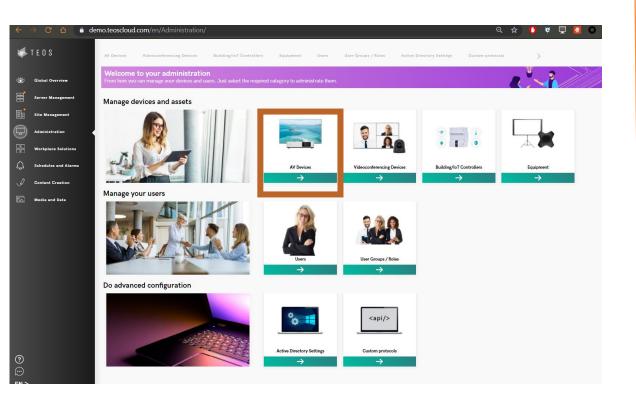


4. Under AV Device, drop down the « Connecting cloud-controlled devices Connection Code and copy it into your device TEOS Cloud control App, after opening it in your device

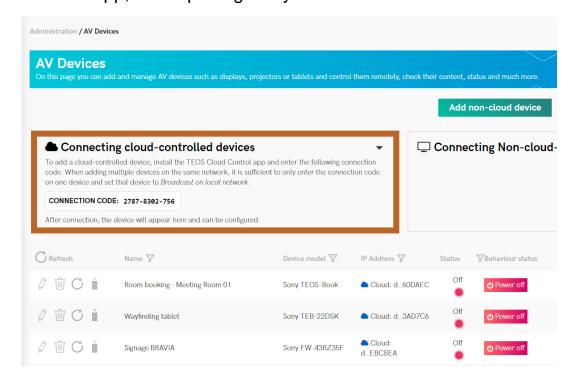


Connect you device to the Cloud for TEOS (3/3)

Please find below the different steps to connect your devices to TEOS

After putting the passcode in your device click « connect »
Your device will automatically register under your TEOS Server

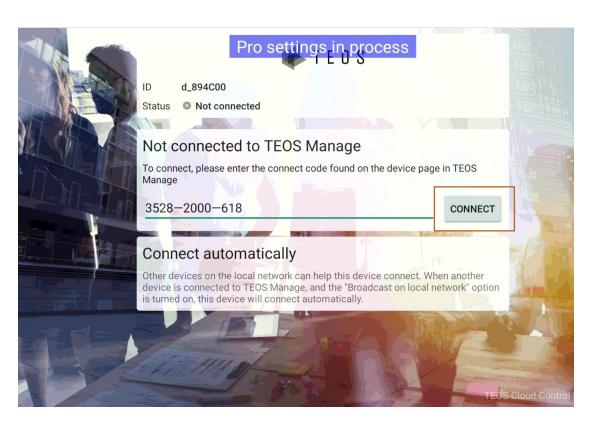

6. Under AV Device, refresh your web page with F5 key, your device will be then visible in TEOS and ready for configuration and license registration. Next step is to go to device edit

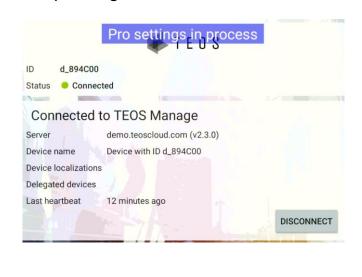


AV Devices



Configure your device in the Cloud for TEOS (1/2)

Please find below the different steps to configure your devices to TEOS

 You can finalise your device configuration by assigning his license, defining a device name, linking it with a device localization, etc. Press save when configuration is finished

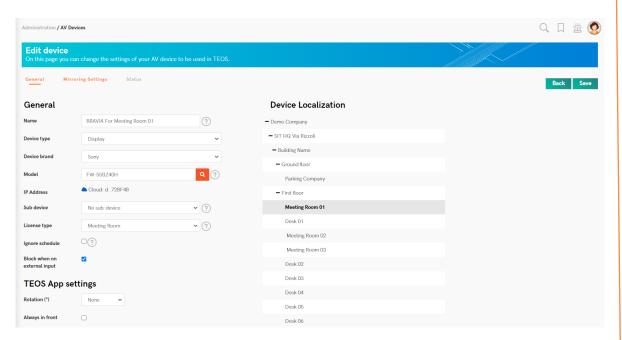

2. Your device status become green and your device takes your configuration



Final step

Your device is now available in TEOS platform and can be used, configured, managed the same way it is on the on premise version

